






## Quick Reference Guide for Q tv Remote

- 
- 1 TV Input Select Source
  - 2 TV Power / Standby
  - 3 RED Button: Recordings  
GREEN Button: 'All Shows' Guide  
YELLOW Button: Filter Guide Options  
BLUE Button: 'All Movies' Guide
  - 4 'A' Button: 36 Hour Lookback
  - 5  Fast Forward / Rewind  
 Play / Pause  
 Stop / Record
  - 6 Apps Shortcut
  - 7 Navigation / OK
  - 8 Back
  - 9 Volume (Up or Down):
  - 10 0-9 Channel Numbers & Text Entry
  - 11 Information
  - 12 Search
  - 13 Infra-red (IR) Window
  - 14 Microphone:
  - 15 Set Top Box Power / Standby
  - 16 'B' Button: Last Channels Watched
  - 17 'C' Button: Settings
  - 18 Channel / Program Guide
  - 19 Home: Launches Android TV main menu including access to Apps.
  - 20  Voice Control: Launches voice-based Google assistant search.
  - 21 Channel / Page Up/Down
  - 22 Mute
  - 23 Subtitles / Closed Captioning
  - 24 Last Channels / Previous Channels
  - 25 Low Battery Warning LED

*Amigo 7x Remote Shown*

# QUICK START

To begin enjoying your **Q tv FROM Quadro** TV service, please follow these Quick Start instructions. For further assistance, please contact us at 519.229.8933, Option 1 for Support. Visit [www.quadro.net/tv](http://www.quadro.net/tv) for additional user manuals.

1. Power on the television on the Qtv Set Top Box (STB).
2. Access the Channel Guide by pressing the **Guide** button. To exit, press **Back/Exit** twice.
3. Move around the Q tv Guide with the Arrow buttons and make selections with Select/OK button.

\*To return to the Q tv App, select Menu, Live, Last, Guide, Shows or Movies.

## Q tv FROM QUADRO FEATURES

### CHANNEL GUIDE:

**View other channels:** Press up or down **Arrows** buttons to go lower or higher in the guide.

**View other times:** Press left or right **Arrows** buttons to go forward or return to current time.

**Tune to a channel:** Press **Select/OK** button to see program details. Press **OK** again to tune to program.

### RESTART:

Restart allows you to start a program that is already in progress from the beginning.

**From Play from the beginning pop-up:** Press **OK** button.

**From a program:** Press **OK** button, use **Arrows** buttons to highlight **Restart**, press **OK**.

### RECORD:

**From the guide:** Press **Record** button. If prompted, choose 'Record this episode only' or 'Record all episodes' based on preference.

**From a program:** Press **Record** button. If prompted, choose 'Record this episode only' or 'Record all episodes' based on preference.

### ACCESS RECORDINGS:

Press **Red** button located above '**A**' '**B**' '**C**' buttons near the top of remote.

*\*Note: You can view your used recording space in the upper right corner.*

### AUDIO/SUBTITLE (CLOSED CAPTION):

Press **SUB/CC** button beside the **0** Channel button to turn off/on.

### ACCESS REPLAY TV:

Open the **Guide**, find the desired channel, press **Left Arrow** to see and highlight **Replay**, and press **OK** button.

### PARENTAL CONTROLS:

Press '**C**' button, use numbers buttons **0-9** to select a 4 digit PIN. Turn 'Restrict Mature Content' ON/OFF